

SmartRoom Instructions

The **Smart Panel** is the box located at the front or side of the room.


Projector Power

Press the **ON** button on the **Smart Panel** to turn on the projector power.

The warm-up time is approximately 45 seconds. The system has two LED indicator lights:

Green indicates ready to use. The control buttons won't work until the **green** light comes on.


Red indicates the projector is warming up. The controls will not operate until the **green** light is on.

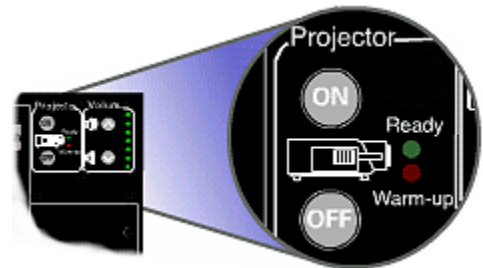

Volume Control

The volume control is in the upper-right corner of the panel.

The volume control will not operate until projector is warmed up and the **light is green**.

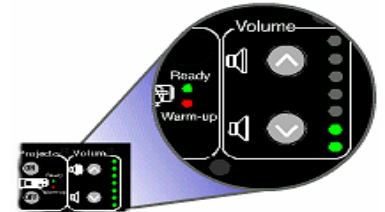

VCR/DVD Operations

1. Make sure the **Projector** power is **ON**.
2. Select the VCR/DVD by pressing the button under the **VCR/DVD** label.
3. Insert the tape into the VCR or press the eject button on the DVD side and insert the disc.
4. Use the VCR's Play, Stop, Fast Forward, Rewind, and Eject buttons to control the tape.
5. Use the DVD remote tethered to the **Smart Panel** to Fast Forward and Reverse DVDs.
6. Adjust the volume as needed in the upper right corner of the **Smart Panel**.
7. Adjust the projection screen, lights and blinds as desired.
8. When you are finished, eject your tape or disc, and turn the **Projector** power **OFF**.

Call For Help M.D.S @ ext. 6-7198

SmartRoom Instructions

Projection from your PC Notebook Computer

1. For Display: Connect your PC to the **Laptop Connection Box** using the provided VGA-to-VGA video cable located at the **Laptop Connection Box**.
2. The network connection in most rooms is located on the **Laptop Connection Box**. Connect the Ethernet cable from the laptop into the port on the **Laptop Connection Box**.
3. You **must** connect your PC to the **Laptop Connection Box** before turning on your computer for proper synchronization.
4. Turn **ON** the **Projector** power on the **Smart Panel**; *then* start up your computer; press **Laptop** button on the **Smart Panel**.
5. If the image is not displaying on both the PC and on the projector, toggle the PC's Function control key by pressing the Fn simultaneously with the F-key that indicates "display" until the screen and laptop both are showing. (On Dell laptops use Fn-F8.)
6. Adjust your PC's screen resolution, if necessary. If the projected image does not appear as expected, you may need to adjust your PC's display to 1024x768, which is the projector's native resolution.
7. Adjust the projection screen, lights, and window blinds as required.
8. When finished, be sure to turn the **Projector** power **OFF** and carefully disconnect your laptop. Coil up or replace the VGA cable in its original location.
9. Macintosh users please call for an additional orientation.



Call For Help M.D.S @ ext. 6-7198