 
 


# Epson Data/Video Projectors

## Computer Use

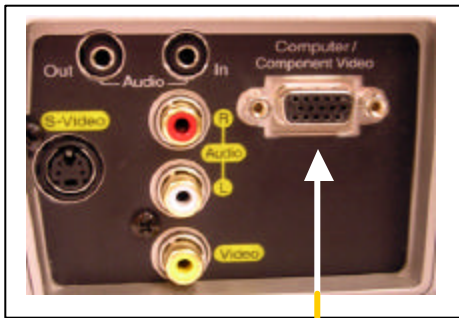

Connect the VGA cable from your laptop here.

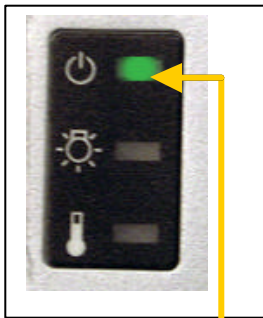

**Orange:** off  
**Flashing orange:** warming up  
**Green:** ready



Press the source button to switch between computer and video mode.

### Setting Up Data/Video Projector for use with a Laptop:

1. Connect VGA cable from laptop to the "Computer" connector on the back of the projector.
2. Plug in the power cord (connects on the side or back of the projector).
3. Turn on your laptop (make sure the resolution is no greater than 1024x768).\*
4. Turn on projector by firmly pressing the red power button. Solid green indicates projector is ready
5. If you are not receiving an image, firmly press the source button to toggle between "computer" and "video" mode. (More troubleshooting steps below.)
6. To turn off the projector, firmly press the red power button twice. **Allow the projector to cool down before unplugging the power cord.** (Solid orange indicates cool down is complete.)

**If using the internal speaker:** connect an 1/8 inch audio cord into the "audio-in" port.

### PC Computers: configuring your display settings if no image appears

If the image appears only on your laptop screen or only on the projector press



toggle between modes until your image displays on both. For non-Dell computers you may need to press function and a key other than F8 (one labeled CRT/LCD or one with an icon of a monitor).

\* **Where to find resolution control settings:**

#### PC Computers:


Start Menu → Control Panel → Display → Settings → Screen Area (1024x768)

#### Mac Computers (running OS X):


Apple Menu → System Preferences → Displays → Resolution (1024x768)

# Epson Data/Video Projectors

## DVD or VCR Use

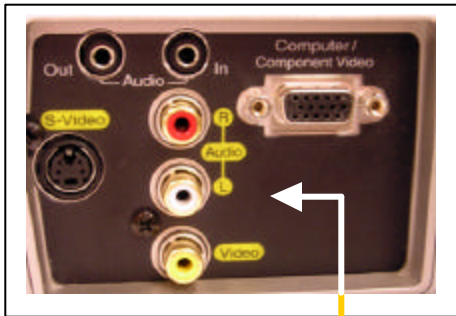

Connect the yellow cable for video from your DVD player or VCR. To use the internal speaker, also connect the red and white cables.\*

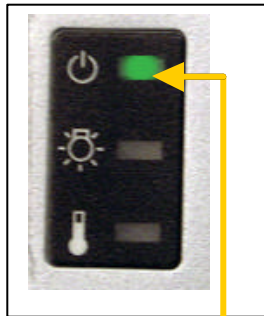

**Orange:** off  
**Flashing orange:** warming up  
**Green:** ready



Press the source button to switch between computer and video mode.

### Setting Up Data/Video Projector for use with a DVD player or VCR:

1. Connect yellow RCA cable from DVD or VCR to back of projector.
2. Plug in the power cord (connects on the side or back of the projector).
3. Turn on your VCR.
4. Turn on projector by firmly pressing the red power button. Solid green indicates projector is ready.
5. If you are not receiving an image, firmly press the source button to toggle between "computer" and "video" mode.
6. To use the internal speaker, connect the red & white audio cables to projector.
6. To turn off the projector, firmly press the red power button twice. **Allow the projector to cool down before unplugging the power cord.** (Solid orange indicates cool down is complete.)

### \* Using the internal speaker with Epson LitePros 720/730:

An RCA → 1/8 inch stereo cable (available upon request) is needed and plugs into the "audio in" port